


A

7. THE SHUNT CONNECTORS (609002115121) WILL BE SHIP TOGETHER WITH THE BOARD.

- PRIMARY SIDE

A

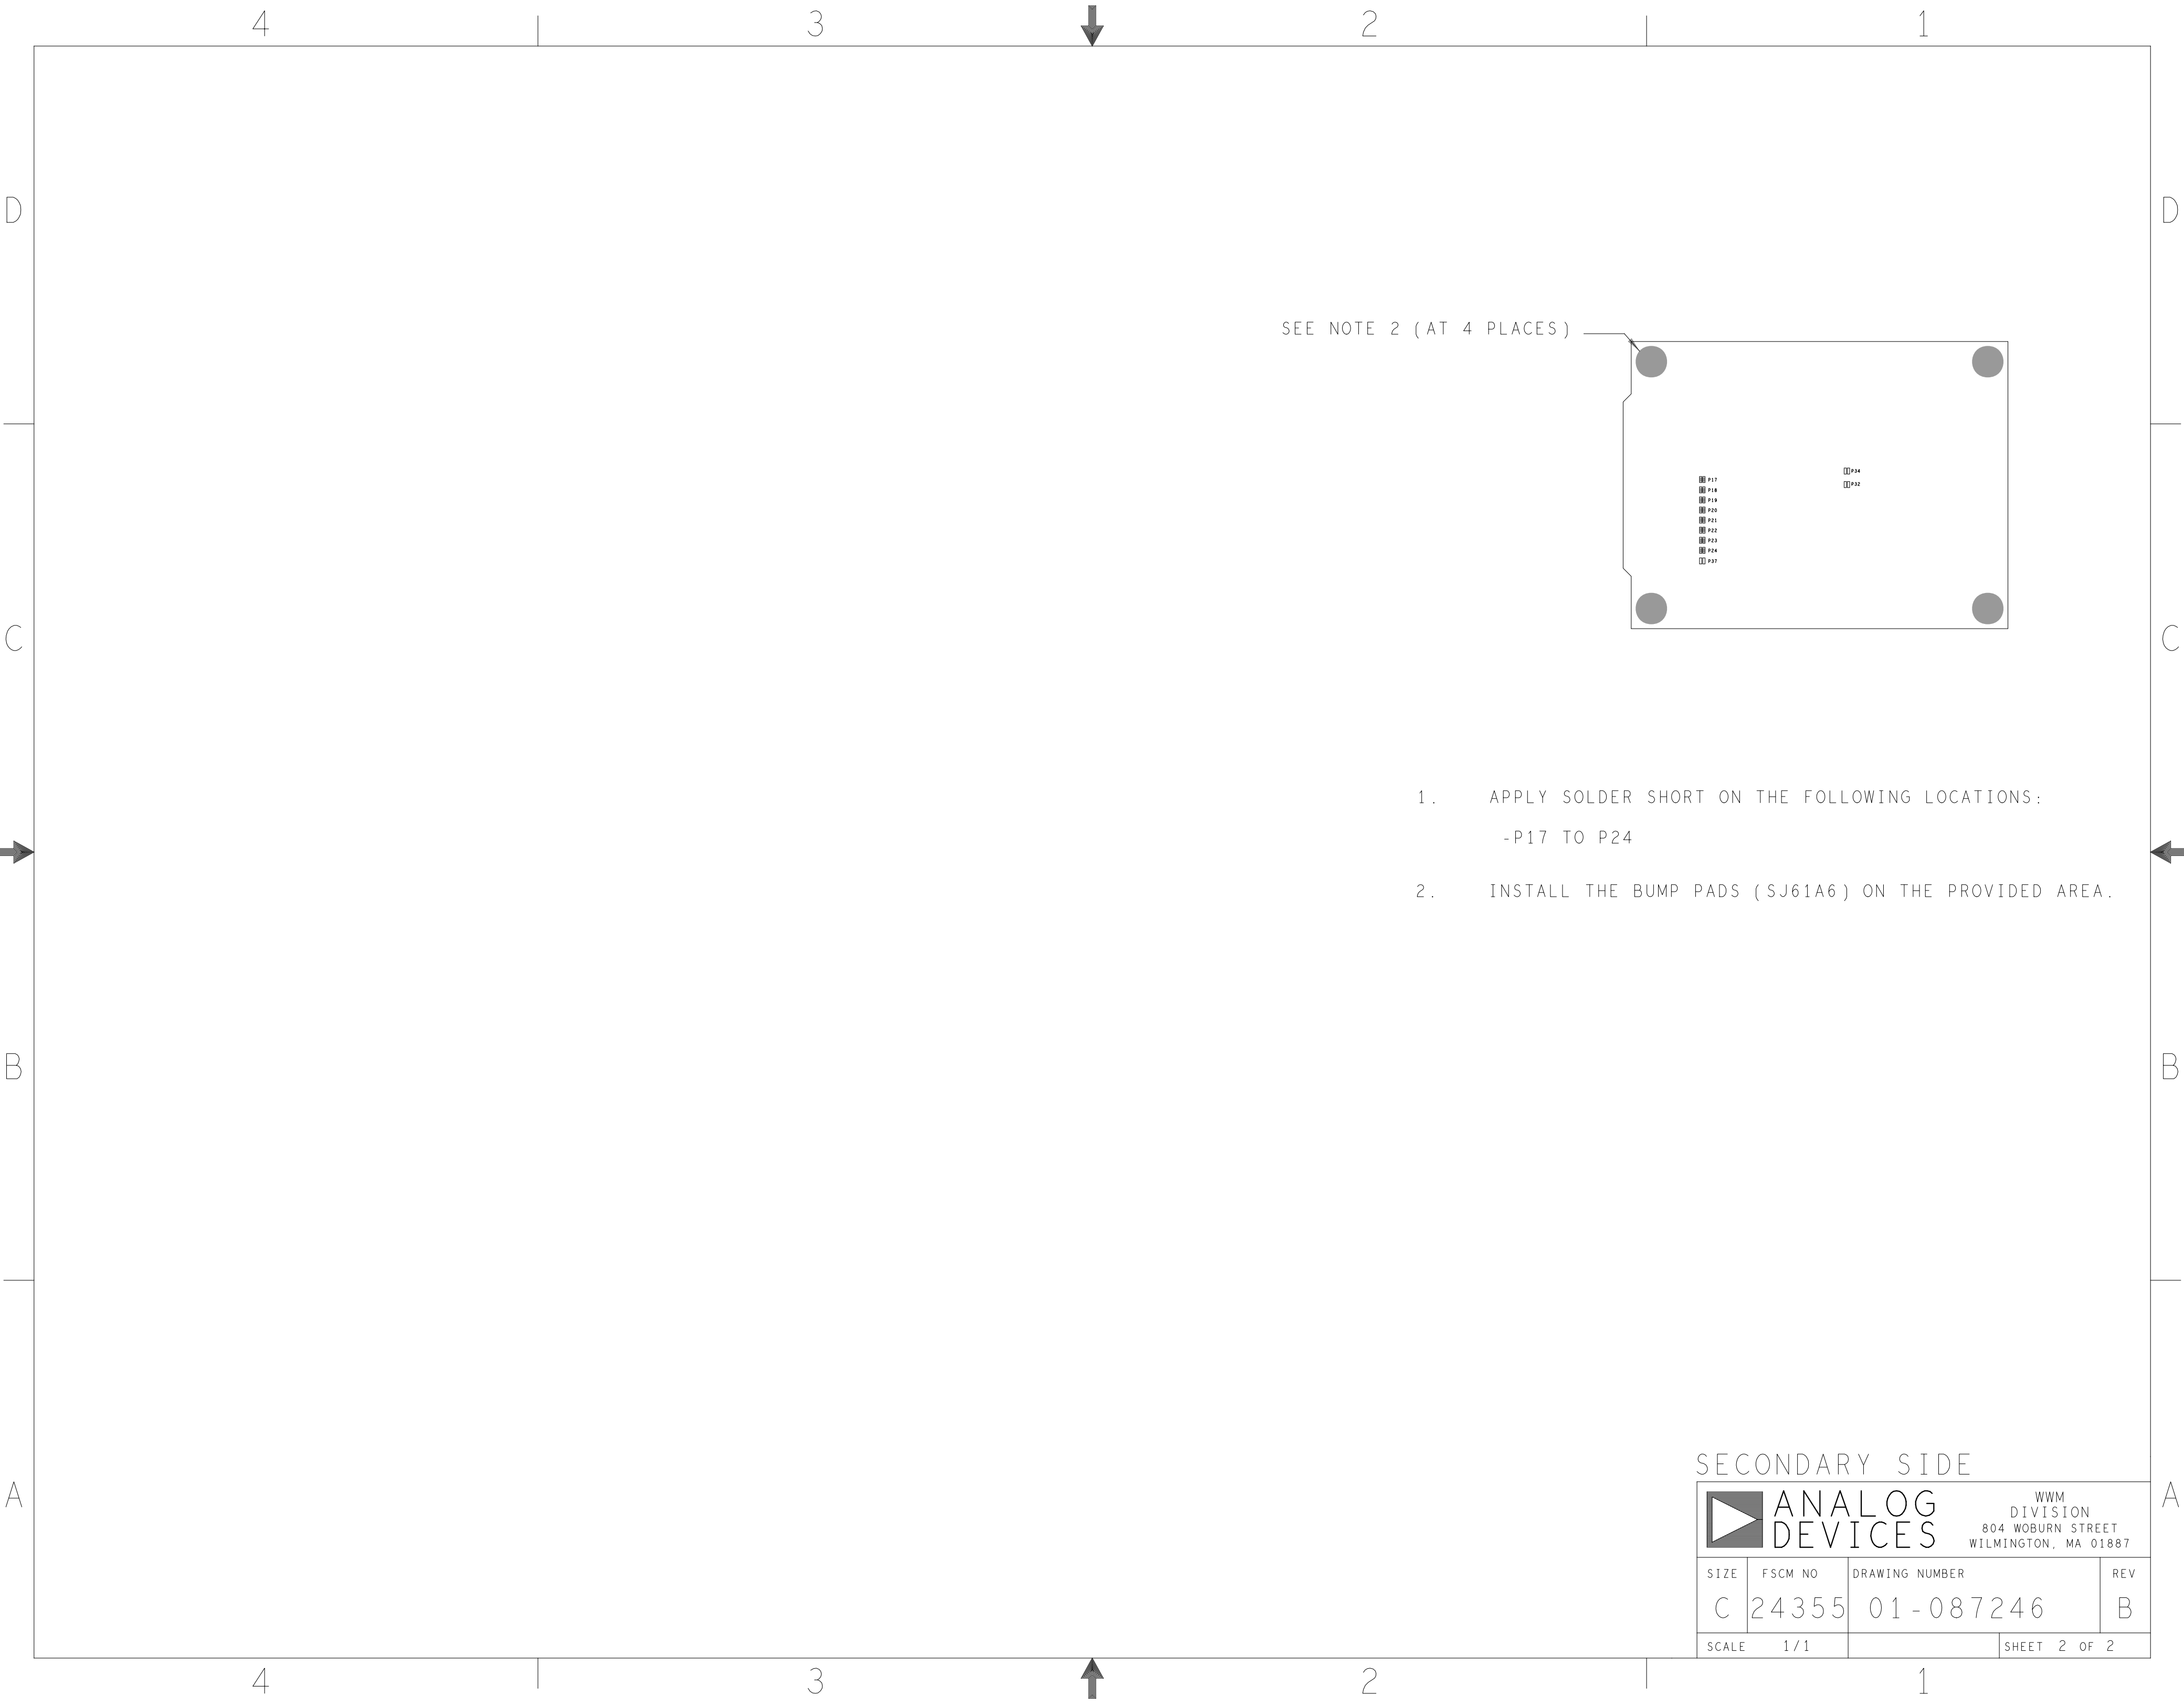

1. APPLY SOLDER SHORT ON THE FOLLOWING LOCATIONS:
-P17 TO P24
2. INSTALL THE BUMP PADS (SJ61A6) ON THE PROVIDED AREA.

SECONDARY SIDE

		WWM DIVISION 804 WOBURN STREET WILMINGTON, MA 01887	
		SIZE	REV
C	24355	DRAWING NUMBER	B
SCALE	1 / 1	SHEET 2 OF 2	